

GERMAN TECHNOLOGY OBD2 DTC Reader Manual

1. Turn ignition on, plug the OBDII cable into the cars OBD-II Port. Check owners manual if you cannot find. GTE OBDII reader will power on and display “CAN OBD2”
2. Press “ENTER” to start diagnosis. The reader will auto scan which protocol is used by the vehicle among the five standard OBDII protocols. Please wait.
3. DTC: Press “ENTER” to read DTC
Press “▲” to turn page up or down
Press “ENTER” again to return to the main menu
4. ERASE: Press “ENTER” to enter erase DTC status. Reader will ask you whether to erase the DTC or not. If YES, press “Enter”. If NO, press“▲”.
5. I/M: Press “ENTER” to enter
Press “▲” to turn page up or down
Press “ENTER” again you can return to the main menu
6. VIN: Press “ENTER” to read VIN code
Press “ENTER” again will return to main menu
7. RES CAN: Press “ENTER” to reset and diagnosis again.

FEATURES:

1. Easy to use menu display
2. Display DTC
3. Display I/M info.
4. Support VIN Code reading
5. Erase DTC

Support Protocol:

1. SAE-J1850 PWM
2. SAE-J1850 VPW
3. ISO-14230
4. ISO-9141
5. ISO-15765-4 (CAN BUS)

GERMAN TECHNOLOGY OBD2 DTC Reader Manual

1. Turn ignition on, plug the OBDII cable into the cars OBD-II Port. Check owners manual if you cannot find. GTE OBDII reader will power on and display “CAN OBD2”
8. Press “ENTER” to start diagnosis. The reader will auto scan which protocol is used by the vehicle among the five standard OBDII protocols. Please wait.
9. DTC: Press “ENTER” to read DTC
Press “▲” to turn page up or down
Press “ENTER” again to return to the main menu
10. ERASE: Press “ENTER” to enter erase DTC status. Reader will ask you whether to erase the DTC or not. If YES, press “Enter”. If NO, press“▲”.
11. I/M: Press “ENTER” to enter
Press “▲” to turn page up or down
Press “ENTER” again you can return to the main menu
12. VIN: Press “ENTER” to read VIN code
Press “ENTER” again will return to main menu
13. RES CAN: Press “ENTER” to reset and diagnosis again.

FEATURES:

1. Easy to use menu display
2. Display DTC
3. Display I/M info.
4. Support VIN Code reading
5. Erase DTC

Support Protocol:

1. SAE-J1850 PWM
2. SAE-J1850 VPW
3. ISO-14230
4. ISO-9141
5. ISO-15765-4 (CAN BUS)